

GETTING TO KNOW YOUR 2010 CAMARO



Review this Quick Reference Guide for an overview of some important features in your Chevrolet Camaro. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

◆ denotes optional equipment

www.chevy.com

INSTRUMENT PANEL

Turn Signal Lever/Driver Information Center Controls

Driver Information Center

Windshield Wipers Lever

Audio Steering Wheel Controls



Exterior/Interior Lamps Control

Cruise Control Buttons

Tilt/Telescopic Steering Wheel Lever

Hood Release Lever



Safety Belt Reminder



Check Engine



Low Tire Pressure



BRAKE Brake System Warning



Antilock Brake System Warning



Charging System



Oil Pressure



Airbag Readiness



Security



Fog Lamps



Cruise Control Set



Traction Control Off



StabiliTrak/Traction Control Off



StabiliTrak/Traction Control Warning



Lights On

Climate Controls/
Heated Seat Buttons ◆

Audio
System

Hazard Warning Flashers Button/
Power Door Locks Button



Auxiliary
Gauges ◆

StabiliTrak
Button

Accessory Power
Outlet*

* The accessory power outlet does not operate once the key is removed from the ignition and the driver's door is opened.

Note: Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster, as well as what to do to ensure safety and prevent damage.

See Instruments and Controls in your Owner Manual.

REMOTE KEYLESS ENTRY TRANSMITTER



Unlock

Press to unlock the driver's door only or all doors. The unlock setting can be changed in the Vehicle Settings menu by using the audio system controls.

Lock

Press to lock all doors. The driver's door will not lock if open.

Trunk

Press and hold to unlatch the trunk.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.



Remote Vehicle Start ◆

Use to start the engine from outside the vehicle.

REMOTE VEHICLE START ◆

During a remote start, the vehicle's climate control system will operate at the same setting as when the vehicle was last turned off and, based on outside temperature, the heated seats will turn on. The heated seats will turn off when the ignition is turned on.

Starting the Vehicle

1. Aim the Remote Keyless Entry transmitter at the vehicle. (Transmitter range depends on operating conditions.)
2. Press and release the  **Lock** button on the transmitter.
3. Immediately press and hold the  **Remote Start** button for at least two seconds. When the vehicle starts, the parking lamps will light and remain on while the engine is running. The engine will continue running for 10 minutes.
4. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.

After a remote start, the ignition must be turned to the On position before driving.

Canceling a Remote Start

- Press and hold the  **Remote Start** button until the parking lamps turn off.

Note: Several conditions will cause the Remote Vehicle Start feature not to operate, such as if the key is in the ignition or the hood or doors are not closed.

See Keys, Doors and Windows in your Owner Manual.

DRIVER'S SEAT ADJUSTMENTS

6-Way Power Seat Adjustment ◆



A

B

4-Way Seat Adjustment



B

A

REAR SEATS

Rear Seat Entry/Exit



Folding Rear Seat

A



A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to raise, lower or tilt the seat.

B. Power Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

A. Seat Adjustment

Move the lever up or down repeatedly to raise or lower the seat.

B. Power Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

Seat Position

Lift the front handle to slide the seat forward or rearward.

1. Pull up the latch (A) on the back of the front seatback.
2. Fold the seat forward.

The manual front seats may be moved forward using the handle under the front of each seat. The power driver's seat may be moved forward using the power control.

1. Pull up the strap.
2. Fold down the seatback.

See Seats and Restraints in your Owner Manual.

DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

DIC Controls



C

B

A

A. MENU

Press to display the:

- **Vehicle Information menu** (units, tire pressure, remaining oil life, coolant temperature, speed warning).
- **Trip/Fuel menu** (digital speedometer, trip odometers, fuel range, average fuel economy, average vehicle speed, OnStar® Turn-by-Turn guidance◆).

B. △▽

Rotate the switch to scroll through the items of each menu.

C. SET/CLR

Press to set or clear the displayed menu item or warning message. Some urgent messages cannot be cleared from the DIC display.

Vehicle Personalization



A

C


B

 
Some vehicle features can be customized by using the controls on the audio system.

1. Press the **CONFIG** button (A) to enter the Settings menu.
2. Turn the **MENU/SELECT** knob (B) to highlight the Vehicle Settings menu; press the knob to select it.
3. Turn the **MENU/SELECT** knob to highlight desired menu item; press the knob to select it.
4. Turn the **MENU/SELECT** knob to highlight the desired selection; press the knob to select it and move back to the last menu.
5. Press the **BACK** button (C) to exit each menu.

See *Instruments and Controls in your Owner Manual.*

AUDIO SYSTEM

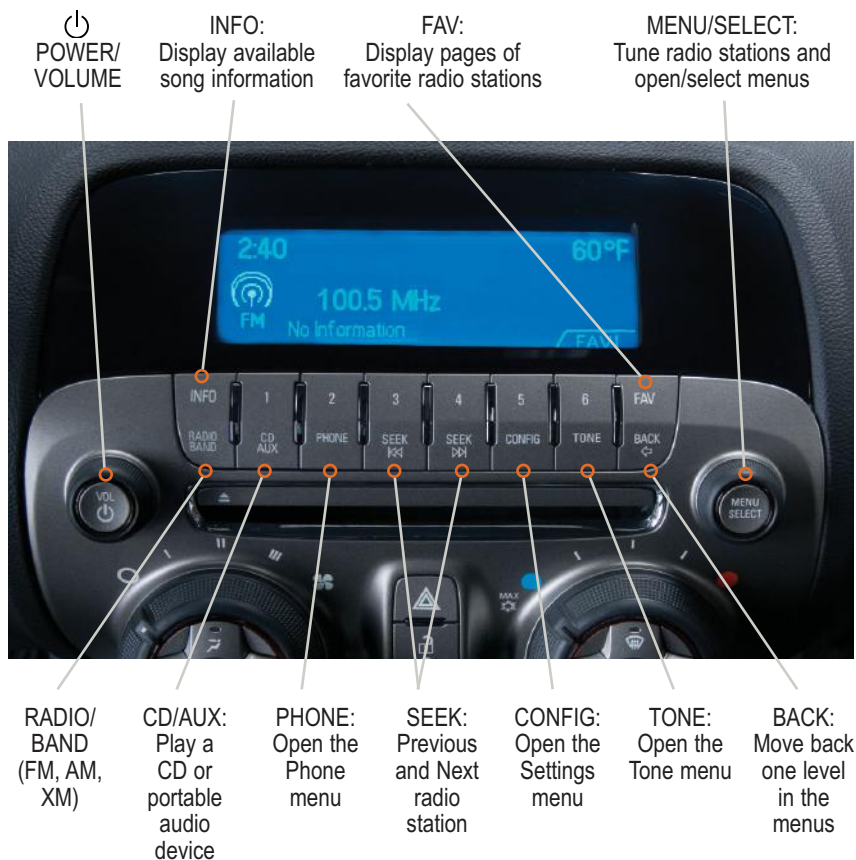

Note: Once the key is turned off, the audio system will continue to work for 10 minutes or until the driver's door is opened. The audio system can be turned on with the vehicle off by pressing the  Power button. Any input will cause the system to operate for 10 minutes or until the Power button is pressed again.

See Infotainment System in your Owner Manual.

AUDIO SYSTEM

Note: Avoid extended searching for specific items or configuring system settings while driving.

Favorite Stations

Radio stations from all bands (AM, FM or XM) can be stored in any order on up to six pages of favorites.

Setting Number of Favorite Pages

1. Press the **CONFIG** button.
2. Turn the **MENU/SELECT** knob to highlight the Radio Settings menu; press the knob to select it.
3. Turn the **MENU/SELECT** knob to highlight Radio Favorites; press the knob to select it.
4. Turn the **MENU/SELECT** knob to select the desired number of favorite pages; press the knob to select it.

Storing Favorite Stations

1. Tune in the desired radio station.
2. Press the **FAV** button to display the page where the station is to be stored.
3. Press and hold one of the six numeric pushbuttons until the station is heard, indicating it is stored.
4. Repeat the steps for each pushbutton on each page.

Setting the Time

1. Turn on the radio.
2. Press the **CONFIG** button.
3. Turn the **MENU/SELECT** knob to highlight Time and Date Settings; press the knob to select it.
4. Turn the **MENU/SELECT** knob to highlight the desired time or date item; press the knob to select it.
5. Turn the **MENU/SELECT** knob to change the value; press the knob to confirm the set value.
6. Press the **BACK** button to exit each menu.

Portable Audio Devices

A 3.5mm auxiliary input jack and, in select models, a USB port are located in the center console.

A portable audio device connected to the auxiliary input jack can be controlled only by using the portable device controls. To optimize speaker volume, fully increase the volume level of the portable device.

Compatible devices connected to the USB port can be controlled by the audio system. Not all devices may be supported. Use the **MENU/SELECT** knob and the audio steering wheel controls to access various functions.

AUDIO STEERING WHEEL CONTROLS



+ ▢ - Volume

Press + or - to increase or decrease the volume.

△ ▽ Next/Previous

Rotate up or down to go to the next or previous favorite radio station, CD track, or MP3 file.

SRC Source

Press to select an audio source.

📞 Push to Talk

Press to interact with the OnStar or Bluetooth system.

📞 End Call/Mute

Press to end or reject an OnStar or Bluetooth call.

Press and hold to mute the vehicle speakers.


BLUETOOTH® SYSTEM

The in-vehicle Bluetooth system allows users with a Bluetooth-enabled cell phone to make and receive hands-free calls using the vehicle's audio system, microphone and controls. The Bluetooth-enabled cell phone must be paired with the in-vehicle Bluetooth system before it can be used in the vehicle. Not all phones will support all functions.

Bluetooth audio streaming is also available with devices that support the following Bluetooth profiles: A2DP version 1.2 and AVRCP version 1.0.

Visit www.gm.com/bluetooth for more information.

CLIMATE CONTROLS

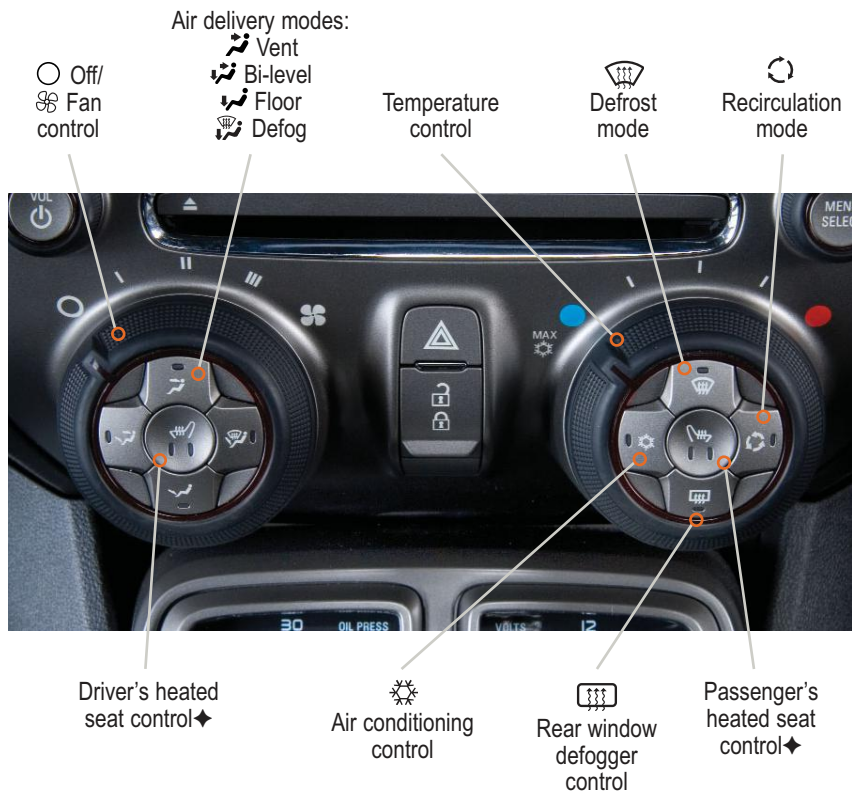

Recirculation Mode

The recirculation mode can help to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. It is not available while the defog or defrost mode is selected.

When the recirculation mode is used without air conditioning, the air humidity increases and the windows may fog.

Maximum Cooling

1. Turn the temperature control to the ☀️ **MAX** setting.
2. Press the ☀️ **Air Conditioning** control button. The indicator will illuminate.
3. Turn the 🌀 **Fan** control to the High setting.

See *Climate Controls* in your Owner Manual.

EXTERIOR/INTERIOR LIGHTING

Automatic Headlamp System



 **Off/On**

AUTO Automatic Headlamp System

Activates the Daytime Running Lamps (DRLs) in the daytime and the headlamps and other exterior lamps at night or when necessary.

Parking Lamps

Manual operation of the parking lamps.

Headlamps

Manual operation of the headlamps.

Fog Lamps◆

Press the switch to turn the fog lamps on or off. On vehicles with the RS package◆, the DRLs replace the fog lamps.

Interior Lighting

Instrument Panel Brightness

Rotate and hold the switch to increase or decrease the intensity of the instrument panel lighting.

Note: The ambient lighting◆ on the door panels does not extend across the instrument panel.

See *Lighting in your Owner Manual.*

WIPERS AND WASHER

Windshield Wipers and Washer



2 High

1 Low

Intermittent:

Rotate the band to increase or decrease the delay between wiper cycles.

 **Off**

 **Mist**

Washer Fluid:

Pull the lever toward you to spray washer fluid on the windshield.

See *Instruments and Controls in your Owner Manual.*

SUNROOF



Vent/Open

Press the rear of the switch to the first detent to vent the sunroof.

Press the rear of the switch to the second detent to express-open the sunroof.

Close

Press and hold the front of the switch to close the sunroof.



WINDOW INDEXING

To provide a tight seal, the window will automatically open slightly when the door is opened and then automatically close when the door is closed.

If battery power is disconnected, follow the Owner Manual procedure for initializing the indexing feature.

DOOR LOCKS

Power Door Locks

- Press the power door  lock/ unlock button, located in the center of the instrument panel, to lock or unlock all doors. An open door will not lock.
- To open a locked door from inside the vehicle, pull the inside door handle to unlock the door and then pull the handle again to open the door.

Manual Door Locks

- Insert the key in the driver's door lock cylinder and turn it counterclockwise to unlock the driver's door.
- Turn the key clockwise in the driver's door lock cylinder to lock all doors.




Note: The door lock cylinder will turn freely if the wrong key is used. To reset the lock cylinder, insert the correct key and turn it to a vertical position. Remove the key and insert it again to lock or unlock the vehicle.

See Keys, Doors and Windows in your Owner Manual.

CRUISE CONTROL



Setting Cruise Control

1. Press the  **On/Off** button. The  **Cruise Control** symbol will illuminate in white in the instrument cluster.
2. When traveling at the desired speed, rotate the **SET-** switch down to set the speed. The  **Cruise Control** symbol will illuminate in green in the instrument cluster.

Adjusting Cruise Control

Use the following switches to adjust or cancel cruise control:

RES+ Resume/Accelerate

Rotate the switch up to resume a set speed.

If the system is active, rotate the switch up to increase speed.

SET- Set/Coast

If the system is active, rotate the switch down to decrease speed.

Cancel

Press to cancel the cruise control but retain the set speed in memory.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

AUTOMATIC TRANSMISSION TAP SHIFT

The 6-speed automatic transmission has a Tap Shift manual mode that allows you to shift gears similar to a manual transmission. When using this feature, the vehicle will have firmer shifting and sportier performance.



Using Tap Shift

1. Move the shift lever to the **M (manual mode)** position. **S (Sport Mode)** will be shown in the Driver Information Center (DIC).
2. Using the buttons on the back of the steering wheel, tap the **left (-) button (A)** to downshift and the **right (+) button (B)** to upshift. The current gear selection will be shown in the DIC.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur.

When coming to a stop, the transmission will automatically shift to 1st gear (V6) or to 2nd gear (V8).

See *Driving and Operating in your Owner Manual*.

MANUAL TRANSMISSION OPERATION

The 6-speed manual transmission (V8) includes a 1-to-4 shift feature that helps achieve the best possible fuel economy.

The 1-to-4 shift light will turn on when, from a standstill, acceleration and vehicle speed qualifications are met. When the shift light is on, the transmission can be shifted only from 1st to 4th gear. Forcing the shift lever into any other gear may damage the transmission.

Note: When selecting Reverse, a swift motion to the left side (V6) or right side (V8) of the gear pattern is required. When 1st (V6) or 5th (V8) is the desired selection, a slower motion toward the gear is the proper method. When in Reverse (V6) an R illuminates in the DIC and a chime sounds.




STABILITRAK®/TRACTION CONTROL SYSTEMS



The traction control system limits wheel-spin, and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions.

Both systems turn on automatically every time the vehicle is started.

Turning the Systems Off/On


- To turn off traction control, press the  **StabiliTrak/Traction Control** button. The  **Traction Off** light will illuminate.
- To turn off both traction control and StabiliTrak, press and hold the button. The  **Traction Control Off/StabiliTrak Off** light will illuminate.
- Press the button again to turn on both systems.

COMPETITIVE MODE AND LAUNCH CONTROL (V8)

Note: Competitive Mode and Launch Control are recommended only for use during closed track events and competitive driving venues. See your Owner Manual.

Competitive Mode

Competitive Mode is an optional handling mode.

- To turn on the Competitive Mode, press the  **StabiliTrak/Traction Control** button twice quickly. Competitive Mode will be displayed in the Driver Information Center.
- Press the button again to return to normal StabiliTrak/traction control operation.

Launch Control (V8 with Manual Transmission)


Launch Control is a form of traction control that optimizes wheelspin while launching the vehicle. It is activated when the vehicle is at a standstill while in Competitive Mode.

When the accelerator pedal is pressed to the floor with the clutch engaged, the RPM is limited to a predetermined level. Releasing the clutch while keeping the accelerator pressed to the floor provides controlled wheelspin and acceleration.

See *Driving and Operating in your Owner Manual*.

TIRES

Tire Pressure Monitor

The Tire Pressure Monitor alerts you when a significant reduction in pressure occurs in one or more of your vehicle's tires by illuminating the  **Low Tire Pressure** warning light on the instrument cluster. The warning light will remain on until the tire pressure is corrected. The proper tire pressures for your vehicle are listed on the Tire and Loading Information label, located below the driver's door latch.

You may notice during cooler conditions that the low tire pressure warning light will appear when the vehicle is first started and then turn off as you drive. This may be an early indicator that your tire pressures are getting low and the tires need to be inflated to the proper pressure.

Note: *The Tire Pressure Monitor can alert you about low tire pressure, but it doesn't replace normal monthly tire maintenance. It is the driver's responsibility to maintain correct tire pressures.*


Tire Sealant and Compressor Kit

The tire sealant and compressor kit can be used to temporarily seal small punctures in the tread area of the tire. The kit is located under the trunk floor. Refer to the tire inflator kit instructions for complete operating information.

Snow Tires

Your vehicle features rear-wheel drive and may be equipped with "summer" performance tires that offer excellent handling on dry roads. However, during winter months, it's recommended to switch to snow tires that will provide additional traction in poor weather conditions. See your Chevrolet dealer for information about recommended snow tires.

ENGINE OIL LIFE SYSTEM

The Oil Life System calculates engine oil life based on vehicle use and illuminates the  **Change Engine Oil** light in the instrument cluster when it's necessary to change the engine oil and filter. The Oil Life System should be reset to 100% only following an oil change.

Resetting the Oil Life System

1. Turn on the ignition, with the engine off.
2. Fully press and release the accelerator pedal slowly three times within five seconds.
3. Turn off the ignition.

BATTERY

The vehicle battery is located below the trunk floor. Jump-start positive and negative posts are located under the hood on the driver's side of the vehicle.

ROADSIDE ASSISTANCE

**1-800-CHEV-USA
(1-800-243-8872)**

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of technically trained advisors who are available 24 hours a day, 365 days a year, to provide minor repair information or make arrangements to tow your vehicle to the nearest Chevrolet dealer.

Chevrolet will provide the following services for 100,000 miles/5 years at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealer for warranty service
- Flat tire assistance
- Jump starts

When calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Roadside Assistance and OnStar

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor, who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CHEVROLET OWNER CENTER

The Chevrolet Owner Center, a complimentary service for Chevrolet owners, is a one-stop resource designed to enhance your Chevrolet ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at www.gmownercenter.com/chevrolet.

Always demand genuine GM Parts

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2009 by GM Corp. All rights reserved.



92220998 B