



GETTING TO KNOW YOUR **2015 CAMARO**



Review this Quick Reference Guide for an overview of some important features in your Chevrolet Camaro. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

www.chevrolet.com

INSTRUMENT PANEL

Turn Signal Lever/Driver Information Center Controls

Driver Information Center

Audio Steering Wheel Controls

Windshield Wipers Lever



Exterior/Interior Lamps Control

Hood Release Lever

Tilt/Telescopic Steering Wheel Lever

Cruise Control Buttons

Head-Up Display Controls

Instrument Cluster Symbols



Safety Belt Reminder



Charging System



StabiliTrak/Traction Control Off



Check Engine



Oil Pressure



StabiliTrak/Traction Control Warning



Low Tire Pressure



Airbag Readiness



Security



Lights On

BRAKE

Brake System Warning



Fog Lamps



Cruise Control Set



Traction Control Off



Antilock Brake System Warning

Climate Controls/
Heated Seat Buttons †

Infotainment
Touch Screen †

Hazard Warning
Flashers Button



Auxiliary
Gauges †

StabiliTrak
Button

Accessory Power
Outlet*

ZL1 model shown

* The accessory power outlet does not operate once the key is removed from the ignition and the driver's door is opened.

Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators of the instrument cluster.

See In Brief in your Owner Manual.

REMOTE KEYLESS ENTRY TRANSMITTER

Unlock

Press to unlock the driver's door.
Press again to unlock all doors.

Lock

Press to lock all doors. The driver's door will not lock when open if the Unlocked Door Anti Lock Out feature is turned on.

Vehicle Locator/Panic Alarm

Press and hold briefly to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold for three seconds to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.

HOLD Trunk


Press and hold to unlock the trunk.



Remote Vehicle Start[†]

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle.

After entering the vehicle, turn the ignition to the ON position.



- During a remote start, the engine will run for 10 minutes.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

Note: To change the remote lock, unlock and remote start settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

If the remote start heated seat option is selected, the heated seat button indicators do not illuminate and the temperature performance of the unoccupied heated seat may be reduced during the remote start. The heated seat turns off when the ignition is turned on.

See Keys, Doors and Windows in your Owner Manual.

POWER DOOR LOCKS

- ▶ Press the power door  Lock/ Unlock button, located on each door, to lock or unlock all doors. An open door will not lock.
- ▶ To open a locked door from inside the vehicle, pull the inside door handle to unlock the door and then pull the handle again to open the door.

See Keys, Doors and Windows in your Owner Manual.

SEAT ADJUSTMENTS

6-Way Power Seat Adjustment[†] (Driver and Front Passenger)




A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to raise, lower or tilt the seat.

B. Power Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

4-Way Seat Adjustment (Driver only)

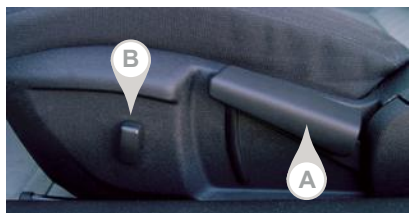

A. Seat Adjustment

Move the lever up or down repeatedly to raise or lower the seat.

B. Power Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

Seat Position

Lift the front handle to slide the seat forward or rearward.

See Seats and Restraints in your Owner Manual.

EXTERIOR/INTERIOR LIGHTING

Automatic Headlamp System



 Off/On

 AUTO Automatic Headlamp System

 Parking Lamps

 Headlamps

 Fog Lamps[†]

Press the knob to turn the fog lamps on or off.

Interior Lighting

Note: The ambient lighting[†] on the door panels does not extend across the instrument panel.

 Instrument Panel Brightness

Rotate and hold the thumbwheel to adjust the intensity of the instrument panel lighting.

 
See Lighting in your Owner Manual.

INFOTAINMENT SYSTEM

Refer to your Owner Manual for important safety information about using the infotainment system while driving.



Touch screen infotainment system [◆] shown.

Note: Once the key is turned off, the audio system will continue to work for 10 minutes or until the driver's door is opened. The audio system can be turned on with the vehicle off by pressing the  Power button. Any input will cause the system to operate for 10 minutes or until the Power button is pressed again.

See Infotainment System in your Owner Manual.

Setting the Time

1. Touch the Time Display on the touch screen♦.
2. Touch the **+** (plus) or **-** (minus) screen button to adjust the hours, minutes or date.
3. Touch the **OK** screen button to confirm the setting.

Storing Favorite Stations

Radio stations from all bands (AM, FM or XM♦) can be stored, in any order, on up to six pages of favorites.

1. Tune in the desired radio station.
2. Press and hold one of the six preset screen buttons until a beep is heard.
4. Repeat the steps for each desired station.

Portable Audio Devices

A 3.5-mm auxiliary input jack and a USB port♦ are located in the center console.

- ▶ An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Chevrolet MyLink♦ will read the device, build a list of voice commands, and fill in missing song information and album graphics. Search for music on-screen or by voice commands.

See Infotainment System in your Owner Manual.

CHEVROLET MYLINK♦

MyLink uses a Bluetooth or USB connection to link to a compatible mobile device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. MyLink enables streaming audio through a smartphone and hands-free voice control. For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit www.chevrolet.com/mylink.

PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres.

- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ Connect your smartphone/device to the system by Bluetooth or, for Apple devices, by a USB cable.
- ▶ Touch the Pandora icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

Stitcher SmartRadio™


Stream favorite podcasts, radio shows and news to your vehicle.

- ▶ Download the Stitcher app to your smartphone and then restart the smartphone.
- ▶ Select a category to listen to.
- ▶ If you like the station, touch the Star screen button to add it to your Favorites list.

CHEVROLET MYLINK

Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say "Say a command," followed by a beep.
3. Say what you want it to do.
 - **Radio control:**
Example command: "Tune FM 104.3"
 - **Phone (using your paired phone):**
Example command: "Call Amanda" or "Dial 555-1212"
 - **Media Music Device Search (when connected to USB only):**
Example command: "Play artist [name]"

See *Infotainment System in your Owner Manual.*

AUDIO STEERING WHEEL CONTROLS



+ ▸ - Volume

Press + or - to adjust the volume.

 
SRC Source

Press to select an audio source.

Next/Previous

Rotate the thumbwheel up or down to go to the next or previous favorite radio station, CD track, or MP3 file.

Push to Talk

 Press to answer an incoming call or interact with the audio, Bluetooth, or OnStar® system.

End Call/Mute

 Press to end or reject a call.


Press and hold to mute the vehicle speakers.

See *Instruments and Controls in your Owner Manual.*

BLUETOOTH® SYSTEM

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit www.gmttotalconnect.com.

Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair," or
To use the touch screen, select Settings > Bluetooth > Pair Device.
2. Start the pairing process on the phone. Locate your vehicle name or MyLink on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, click "yes" and always allow.

See *Infotainment System in your Owner Manual.*

VEHICLE PERSONALIZATION

Some vehicle features can be customized by using the controls on the audio system.



1. On the touch screen infotainment system[†], touch the **Home** screen button.
2. Touch the **Settings** screen button.
3. Touch the **Vehicle Settings** screen button; or turn the **MENU/SELECT** knob (A) to highlight Vehicle Settings, and then press the knob to select it.
4. Use the screen buttons to select the desired menu item and setting; or turn the **MENU/SELECT** knob to highlight the desired menu item or setting, and then press the knob to select it.
5. Press the **BACK** button (B) to exit each menu.

See *Instruments and Controls in your Owner Manual*.

ULTRASONIC REAR PARKING ASSIST/REAR VISION CAMERA[†]

Ultrasonic Rear Parking Assist

Detected objects are indicated by audible beeps when the vehicle is in Reverse. The interval between beeps becomes shorter as the vehicle gets closer to an object. The system operates at speeds less than 5 mph.

- ▶ To turn the system on or off, go to Collision/Detection Systems in the Vehicle Settings menu.

Rear Vision Camera

When the vehicle is in Reverse, a view of the area behind the vehicle appears on the radio display.

See *Driving and Operating in your Owner Manual*.

WINDSHIELD WIPERS AND WASHER



Washer Fluid

Pull the lever toward you to spray washer fluid on the windshield.

HI High

LO Low

INT Intermittent

Rotate the band to increase or decrease the delay between wipes.


OFF

1x Mist

Single wipe.

See *Instruments and Controls in your Owner Manual*.

CLIMATE CONTROLS

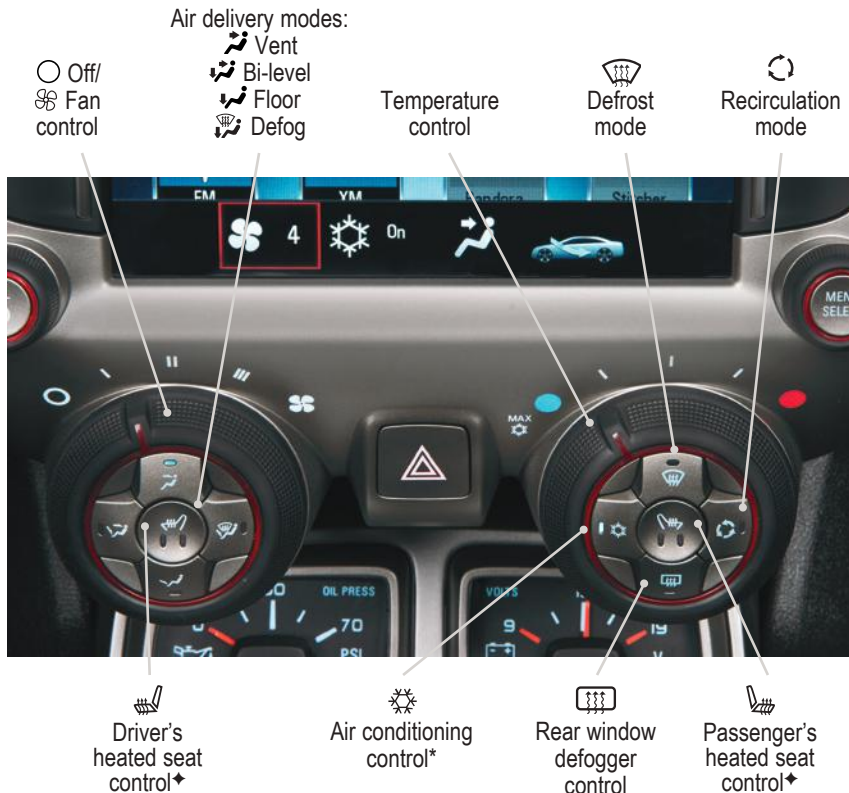

Recirculation Mode

The recirculation mode can help quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle. It is not available while the defog or defrost mode is selected.

When the recirculation mode is used without air conditioning, the air humidity increases and the windows may fog.

Maximum Cooling

1. Turn the temperature control to the ☼ **MAX** setting.
2. Press the ☼ **Air Conditioning** control button. The indicator will illuminate.
3. Turn the ☼ **Fan** control to the High setting.

See *Climate Controls* in your *Owner Manual*.

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.



A. MENU

Press to display the:

- **Vehicle Information menu** (units, tire pressure, remaining oil life, coolant temperature, speed warning).
- **Trip/Fuel menu** (digital speedometer, trip odometers, fuel range, average fuel economy, average vehicle speed, OnStar® Turn-by-Turn guidance♦).
- **Performance menu** (lap timer, coolant temperature, battery voltage, oil temperature, oil pressure).

B. Δ ∇

Rotate the thumbwheel to scroll through the items of each menu.

C. SET/CLR

Press the button on the end of the lever to set a menu item or clear a message. Press and hold the button to reset a menu item.

See *Instruments and Controls* in your Owner Manual.

HEAD-UP DISPLAY♦

The Head-Up Display (HUD) projects a range of vehicle information on the windshield, reducing the need to look away from the road.



HUD Controls

OFF

Turn the knob fully counterclockwise to turn off the display.

Brightness

Turn the knob to brighten or dim the display.

PAGE

Press the **PAGE** button on the knob to select one of the display formats.




Δ ∇ Up/Down

Press the HUD up or down arrow button to adjust the up/down position of the display on the windshield.

See *Instruments and Controls* in your Owner Manual.

CRUISE CONTROL

Setting Cruise Control

1. Press the  **On/Off** button. The  **Cruise Control** symbol will illuminate in white in the instrument cluster.
2. When traveling at the desired speed, rotate the **SET-** switch down to set the speed. The  **Cruise Control** symbol will illuminate in green in the instrument cluster.



Adjusting Cruise Control

Use the following switches to adjust or cancel cruise control:

RES+ Resume/Accelerate

Rotate the switch up to resume a set speed.

If the system is active, rotate the switch up to increase speed.

SET- Set/Coast

If the system is active, rotate the switch down to decrease speed.

Cancel

Press to cancel the cruise control but retain the set speed in memory.

The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.

See Driving and Operating in your Owner Manual.

AUTOMATIC TRANSMISSION TAP SHIFT[◆]

The 6-speed automatic transmission has a Tap Shift mode that allows you to shift gears similar to a manual transmission. When using this feature, the vehicle will have firmer shifting and sportier performance.



Using Tap Shift

1. Move the shift lever to the **M (Manual)** position. **S (Sport Mode)** will be shown in the Driver Information Center (DIC).
2. Press the paddles on the back of the steering wheel toward you to shift gears. Press the left (-) paddle to downshift and the right (+) paddle to upshift. The current gear selection will be shown in the DIC and HUD[◆].

If current vehicle speed is too high or too low for the requested gear, the shift will not occur.

When coming to a stop, the transmission will automatically shift to 1st gear (V6) or to 2nd gear (V8).

See Driving and Operating in your Owner Manual.

MANUAL TRANSMISSION OPERATION

The 6-speed manual transmission (V8) includes a 1-to-4 shift feature that helps achieve the best possible fuel economy.

The 1-to-4 shift light will turn on when, from a standstill, acceleration and vehicle speed qualifications are met. When the shift light is on, the transmission can be shifted only from 1st to 4th gear. Forcing the shift lever into any other gear may damage the transmission.

Note: When selecting Reverse, a swift motion to the left side (V6) or right side (V8) of the gear pattern is required. When 1st (V6) or 5th (V8) is the desired selection, a slower motion toward the gear is the proper method. When in Reverse (V6), an R illuminates in the DIC and a chime sounds.

See Driving and Operating in your Owner Manual.



STABILITRAK®/TRACTION CONTROL SYSTEMS

The traction control system limits wheelspin, and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.



Turning Off Traction Control

Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn off traction control, press the  **StabiliTrak/Traction Control** button. The  **Traction Control Off** light will illuminate.
- ▶ Press the button again to turn on traction control.


See Driving and Operating in your Owner Manual.

COMPETITIVE MODE AND LAUNCH CONTROL (V8)

Note: Competitive Mode and Launch Control are recommended only for use during closed track events and competitive driving venues. See your Owner Manual.

Competitive Mode

Competitive Mode is an optional handling mode.

- ▶ To turn on the Competitive Mode, press the  **StabiliTrak/Traction Control** button twice quickly. Competitive Mode will be displayed in the Driver Information Center.
- ▶ Press the button again to return to normal StabiliTrak/traction control operation.

Launch Control (V8 with Manual Transmission)

Launch Control is a form of traction control that optimizes wheelspin while launching the vehicle. It is activated when the vehicle is at a standstill while in Competitive Mode.

When the accelerator pedal is pressed to the floor with the clutch engaged, the RPM is limited to a predetermined level. Releasing the clutch while keeping the accelerator pressed to the floor provides controlled wheelspin and acceleration.

See Driving and Operating in your Owner Manual.

SUNROOF



Vent/Open

Press the rear of the switch to the first detent to vent the sunroof.

Press the rear of the switch to the second detent to express-open the sunroof.

Close



Press and hold the front of the switch to close the sunroof.

See *Keys, Doors and Windows* in your Owner Manual.

CONVERTIBLE TOP OPERATION

Before operating the convertible top, park the vehicle, remove the tonneau cover from the vehicle (if installed), and make sure that the **cargo shade (A) is in the extended, fastened position with no objects above the shade** and the trunk is closed.

Operate the Power Top

1. Start the engine, shift to Park or Neutral, and set the parking brake.
2. Pull and turn the front latch clockwise to unlock the top; pull and turn it counterclockwise to lock the top.
3. Press and hold the  **Open** switch (rear part of the switch) on the left side of the overhead console to lower the top; press and hold the  **Close** switch (front part of the switch) to raise the top. The windows will automatically lower. A chime will sound when the top is lowered completely.



Tonneau Cover Installation

1. Unfold and place the cover on the vehicle.
2. Attach the cords on each side of the cover to the posts on the back seat rear panel.
3. Insert the forward tabs (B) under the trim on both sides and push the outer rim and center of the cover under the trim.



Loss of Vehicle Power

If the vehicle has lost power, the convertible top can be raised manually by releasing pressure on the hydraulic pump. Refer to your Owner Manual.

Note: Top will not operate in cold weather below 32°F (0°C).

See *Keys, Doors and Windows* in your Owner Manual.


WINDOW INDEXING

To provide a tight seal, the window will automatically open slightly when the door is opened and then automatically close when the door is closed. If battery power is disconnected, follow the Owner Manual procedure for initializing the indexing feature.

See Keys, Doors and Windows in your Owner Manual.

TIRES

Tire Pressure Monitor

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

Tire Sealant and Compressor Kit

The tire sealant and compressor kit* can be used to temporarily seal small punctures in the tread area of the tire. The kit is located under the trunk floor. Refer to the tire inflator kit instructions for complete operating information.

Snow Tires

Your vehicle features rear-wheel drive and may be equipped with "summer" performance tires that offer excellent handling on dry roads. However, during winter months, it is recommended to switch to snow tires that will provide additional traction in poor weather conditions. See your Chevrolet dealer for information about recommended snow tires.

See Vehicle Care in your Owner Manual.

ENGINE OIL LIFE SYSTEM

The Oil Life System calculates engine oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center when it's necessary to change the engine oil and filter. The system should be reset to 100% only following an oil change.

See Vehicle Care in your Owner Manual.

BATTERY

The vehicle battery is located below the trunk floor. Jump-start positive and negative posts are located under the hood on the driver's side of the vehicle.

See Vehicle Care in your Owner Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA
(1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, your vehicle is automatically enrolled in the Chevrolet Roadside Assistance program for 5 years/100,000 miles, whichever occurs first, at no expense to you. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to provide minor repair information or make arrangements to tow your vehicle to the nearest Chevrolet dealer.

Roadside Assistance and OnStar

If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

MYCHEVROLET AND ONSTAR® MOBILE APPS



The myChevrolet and OnStar Remotelink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Visit onstar.com for more information. Download the mobile apps from your compatible device's app store.

CHEVROLET OWNER CENTER

The Chevrolet Owner Center, a complimentary service for Chevrolet owners, is a one-stop resource designed to enhance your Chevrolet ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual and special privileges. Sign up today at my.chevrolet.com.

We recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2014 by General Motors. All rights reserved.



23121189 A