




Underhood Wire Harness Cover Installation Instructions

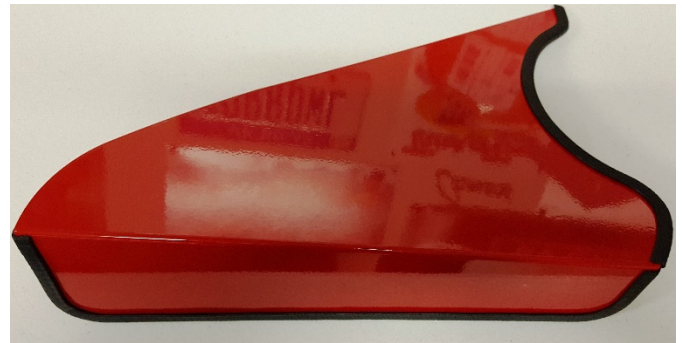

Congratulations! On your purchase of the wire harness cover we, know that you will enjoy having this great product in your Camaro. We recommend if you are going to paint your cover to clean it with brake cleaner or something similar. This will remove any dirt, oils and finger prints that might be on it. If you have purchase one of our powder coated or mirrored covers don't use any cleaner on it that might harm the appearance.

When you're ready to install your cover lift your relay fuse cover up and remove it and, then slide the edge of the cover under the fender and position the cover in place and, replace the relay cover and close. If you wish you could attached some Velcro or a small dab of silicone to hold it in place but, we found that not to be necessary.

Enjoy! Your Wire Harness Cover



Cleaning Instructions

To maintain the appearance, be sure to only use a polish suitable for mirrored stainless steel and only apply polish with a 100% microfiber cloth or shammy. Remember, mirrored stainless steel scratches easily. So be sure to be careful when cleaning it.

Note: There may be some lines on the underside from handling and, making it which you will not see once you install it in your Camaro. This product will come with protecting vinyl just simply pull off the protective vinyl to expose the beautiful mirrored finish. There may be some residue from where the laser cut through the vinyl which you can remove with 100% alcohol and a cotton pad.

