




Underhood Bowtie Installation Instructions

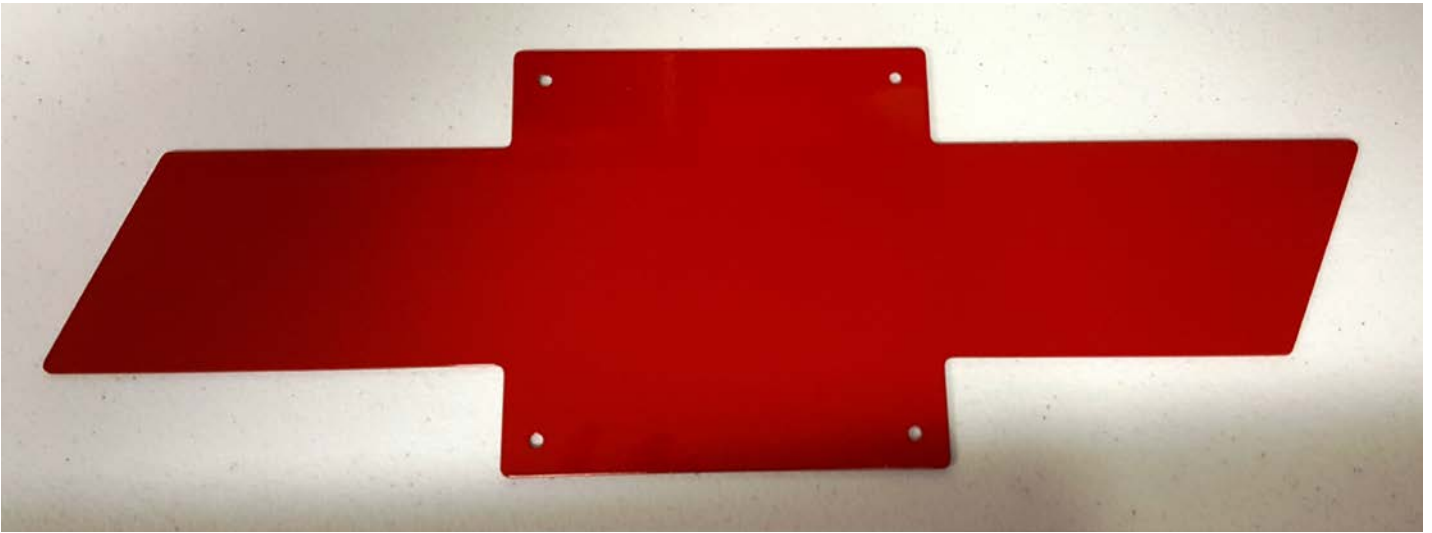



Congratulations! On your purchase of the bowtie we, know that you will enjoy having this great product in your Camaro.

Time needed for this job is about ½ hour, after you have your tools with you at the car. If it takes you longer do not worry. Take your time, and work at a comfortable pace. Please completely read these instructions prior to beginning. It will only take you a few minutes to read. Do not skip any of the steps. The pictures below are for demonstration purpose only.

Tools needed: Please gather all tools prior to beginning installation.

1. One Paint marker or some method to mark location of bolt holes on the hood liner.
2. One screw driver to tighten screws with that you have purchase. (We recommend bolt with washer and nylon nut.) As a standard, this piece will mount with (4) 1/4" (#14)
3. One exacto knife to cut small X's in liner at screw holes locations.
4. Flat head screwdriver, for removing hood liner retainers
5. Gloves to protect your hands.

Step one: Time estimate 2-3 minutes.

Place the bowtie firmly up against the underhood liner, and mark the screw holes locations "on the liner" with the marking device you have selected as demonstrated below.





Step Two: Time estimate 5-7 minutes.

Take your exacto knife and cut (4) "X" patterns in the hood insulation, where you placed the screw location marks from step number one. Make sure these "X" cuts are large enough for the screws to go through. The purpose of the "X" cut is to avoid making an actual hole in your liner. They will also help hold the screws in place, while you are starting the nylon lock nuts.



Step Three: Time estimate 10 minutes.

Remove the (8) eight hood liner retainers from the hood liner. You will get better results by removing it completely.

Using the screwdriver, only loosen the retainers. Then use your finger to grasp the retainer, and slowly, but firmly pull it out. Do not bend the retainers; pull them out in a straight motion. They will be reused, when you are finished.



Step Four: Time estimate 10 minutes.

Gather together all of the hardware that you purchase that you are going to use to secure the bowtie supplied by you.

4 Chrome, Red, or Black buttons we have supplied to you with the bowtie depending which bowtie that you purchase from us.

The assembly method is:


1. Place the screws through the button plastic attachment and then the holes on the front of the bowtie, and through the "X's" in the liner.
2. Then place a washer first, and a nylon locknut last from the backside of the insulation, onto each screw.
3. Hold the screw stationary with your hand behind the hood liner, and tighten the nuts until tight. This will eliminate the screw from rotating on the surface of the bowtie. **Do not overtighten, or the washers can dig into the liner.**





Step Five: Time estimate 5 minutes.

Align hood liner back up to underside of the hoods, and reinsert retainers. Do not bend them. Press straight in to the holes until firmly seated you will hear a snap then you know that they are in place. **Note: do not over tighten the bowtie bolts to your hood liner or you could dent the bowtie and you will see it in the reflection of the bowtie.** Congratulations! You are finish. Enjoy your New Underhood Bowtie.

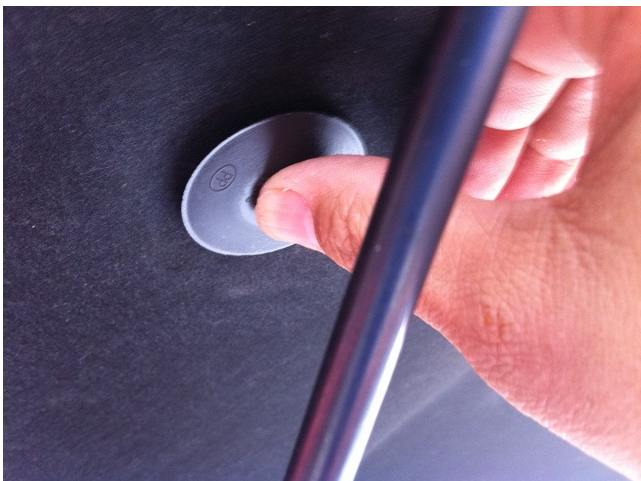

Cleaning Instructions

To maintain the appearance, be sure to only use a polish suitable for mirrored stainless steel and only apply polish with a 100% microfiber cloth or shammy. Remember, mirrored stainless steel scratches easily. So be sure to be careful when cleaning it.

Note: There may be some lines on the underside from handling and, making it which you will not see once you install it in your Camaro. This product will come with protecting vinyl just simply pull off the protective vinyl to expose the beautiful mirrored finish. There may be some residue from where the laser cut through the vinyl which you can remove with 100% alcohol and a cotton pad.

