


V6 & V8 Window Trim Cover Installation Instructions

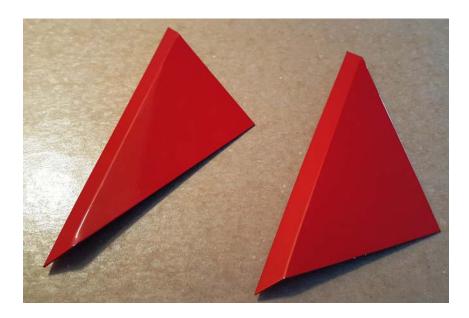





Congratulations! On your purchase of the V6 & V8 Window Trim Cover we know that you will enjoy having this great product on your Camaro.

Time needed for this job is about 15-20 mins. Please completely read these instructions prior to beginning. It will only take you a few minutes to read. Do not skip any of the steps.



Step One: To install your window trim cover leave the vinyl coating on while you are installing the trunk trim cover so, you don't scratch it or get finger prints on it. If you purchase one that is powder coated it will not have any vinyl to remove.

Step Two: Trial fit the window trim cover before removing any 3M tape.

Step Three: Make sure that you clean your area where the window trim cover is going to go with alcohol and let it dry and, then clean it again with alcohol. Make sure that it is completely dry before installing the window trim cover.

Step Four: Also clean the back side of the window trim cover one also with a mild cleaner if you purchase one of our mirrored.

Step Five: Remove the 3M tape.

Step Six: Make sure that you applied pressure on all 3 edges of the window trim cover with a microfiber towel for about 30 sec to make sure it stays in place.

Step Seven: After you install the window trim cover then, remove the vinyl coating.

Step Six: Congratulations! You are finish. Enjoy your new window trim covers.

Cleaning Instructions

To maintain the appearance, be sure to only use a polish suitable for mirrored stainless steel and only apply polish with a 100% microfiber cloth or shammy. Remember, mirrored stainless steel scratches easily. So be sure to be careful when cleaning it.

Note: There may be some lines on the underside from handling and, making it which you will not see once you install it in your Camaro. This product will come with protecting vinyl just simply pull off the protective vinyl to expose the beautiful mirrored finish. There may be some residue from where the laser cut through the vinyl which you can remove with 100% alcohol and a cotton pad.

